


17	05	18	1C	10	0A	02		
	5	P.C.Z	状态	UP	RGB	2		停止
16	04			DOWN	RIGHT	01	0B	待机
	4					1		
15								
14								
13	06	00		1B	09	03		
	6	0		屏显	图像	3		后退
12	09	00	1E	13	1D	16		
	9	00	菜单/开关	LEFT	静音	交替	Caps Lock	前进
11	08	07		1F	1A			
	8	7		视频	静止	声音	切换	选项
	01	02	03	04	05	06		

"状态"键按下: 02001E01
"状态"键放开: 00801E07

17	05	18	1C	10	0A	02		
	5	P.C.Z	状态	UP	RGB	2		停止
16	04			DOWN	RIGHT	01	0B	待机
	4					1		
15								
14								
13	06	00		1B	09	03		
	6	0		屏显	图像	3		后退
12	09	00	1E	13	1D	16		
	9	00	菜单/开关	LEFT	静音	交替	Caps Lock	前进
11	08	07		1F	1A			
	8	7		视频	静止	声音	切换	选项
	01	02	03	04	05	06		

"菜单/开关"键按下: F9000008
"菜单/开关"键放开: F8000007

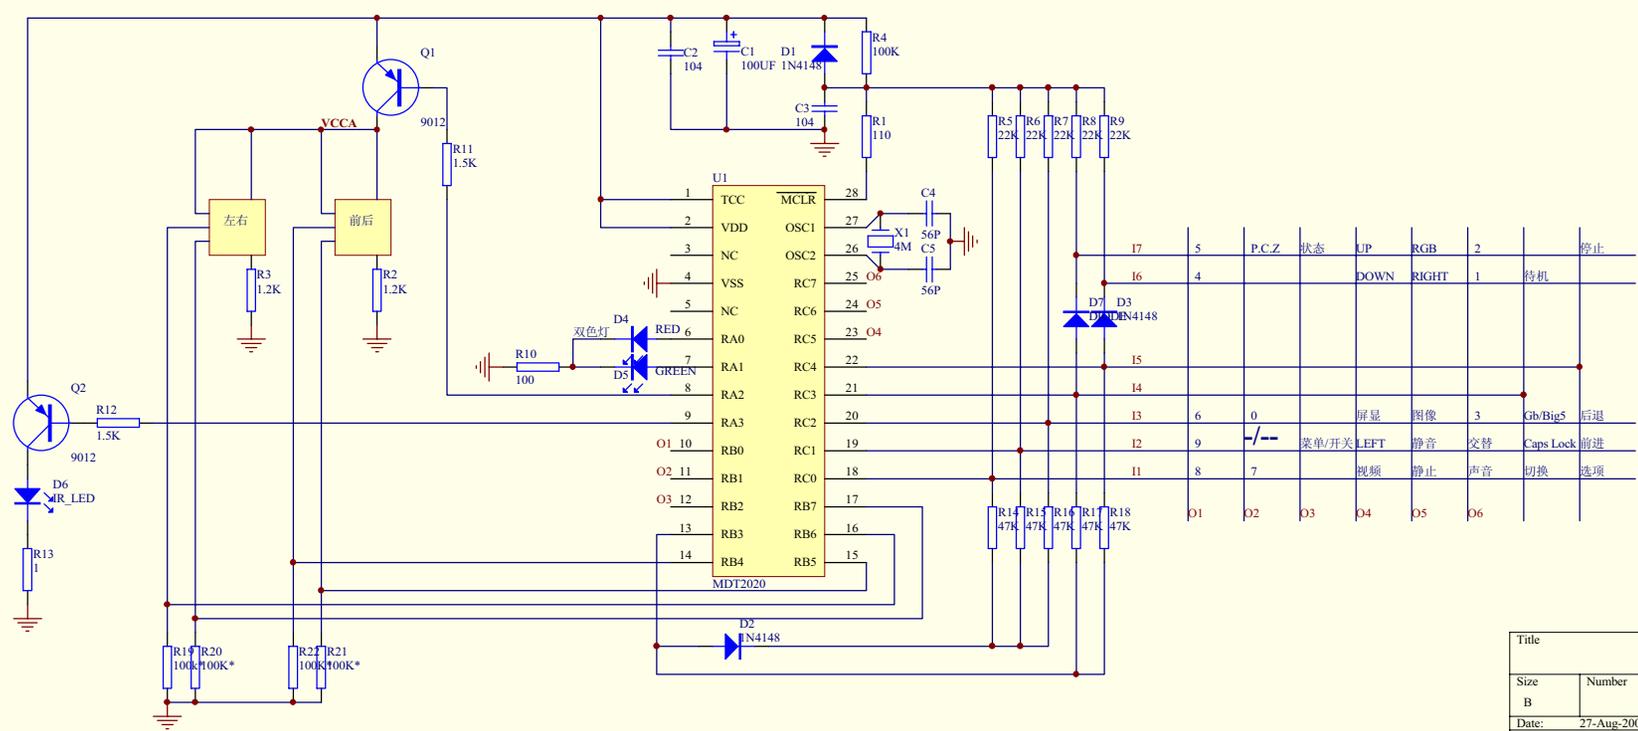

17	05	18	1C	10	0A	02		
	5	P.C.Z	状态	UP	RGB	2		停止
16	04			DOWN	RIGHT	01	0B	待机
	4					1		
15								
14								
13	06	00		1B	09	03		
	6	0		屏显	图像	3		后退
12	09	00	1E	13	1D	16		
	9	00	菜单/开关	LEFT	静音	交替	Caps Lock	前进
11	08	07		1F	1A			
	8	7		视频	静止	声音	切换	选项
	01	02	03	04	05	06		

Title		
Size	Number	Revision
B		
Date:	27-Aug-2003	Sheet of
File:	D:\prog\CO171.sch	Drawn By: