



14	Cursor left	Repeat	3	10+	
13	Cursor down	Play(/Pause)	2	0	
12	Cursor up	Rew (Seek down)	1	9	Light
11	Enter	FF(Seek up)	Headphone	8	Input B
	Angle	Return	Media	7	Input A
	Subtitles	Menu	Video	6	Volume down
	Audio	Display	Shuffle	5	Volume up
	Power	Cursor right	Stop(Eject)	4	Cancel/Clear

Title			38 KEY REMOTE CONTROLLER		
Size	Number		Revision		
A4					
Date:	8-May-2004	Sheet of			
File:	D:\prog\...\C0201.Sch	Drawn By:			